BSP

无线控制器说明书

通用说明：

1、本产品采用人体工学设计，手感舒适。
2、手柄支持Switch主机、PC电脑、电视、安卓手机、Shooting Plus V3模式、HID标准模式和各类游戏苹果手机MFI游戏以及PS3/PS4主机。
3、支持背部扩展安设置【最高可设十二个键】
4、支持马达震感强弱调节，共四种模式
5、产品裸机净重约203.6g
6、支持Turbo连发，Auto自动连发功能。

【固官方游戏平台软件升级式源代码变更等不可抗拒的因素】

产品性能参数：

1.工作电压：DC3.7V
2.工作电流：约120mA
3.持续使用时间：≈12小时
4.休眠电流：<2ua
5.充电电压/电流：DC5V/500mA
6.待机时间：满电放置60天

功能按键示意图：

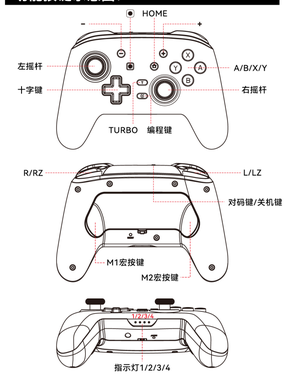

产品连接说明：

【SWITCH主机连接】

1、在SWITCH主机，选择 手柄Controllers > 更改握把/顺序Change Grip/order，进入到SWITCH主机配对模式界面Press L+R on the controller;
2、长按手柄顶部"对码键"5秒进行连接，连接成功后1号指示灯常亮;
3、再次连接Switch时，按"HOME键"开机，即可自动连接。

【PS3/PS4/PS5主机连接】

1、将USB数据线插上PS4的USB接口，另外一端的Type-C接口插上手柄，灯光闪烁后，按"HOME键"即可连接。
2、连接成功后通道灯常亮为连接成功。常亮后把数据线接了即可无线操作。再次连接PS4时，按"HOME键"开机，即可自动连接。

【有线模式连接】

1、将USB数据线插上电脑主机的USB接口，另外一端的Type-C接口插上手柄，连接成功后指示灯常亮为连接成功。
2、连接成功：按住手柄中间"HOME键"可以切换手柄模式
X-INPUT(2号灯常亮) (PC360模式)
D-INPUT(3号灯常亮) (PC数字模式)

Steam端：Steam界面左上角，设置-常规控制器-找到通用手柄等都勾选即可

Switch 主机有线连接为1号灯常亮

【2.4G模式连接】

1、接收器插电脑主机的USB上，手柄按"L+HOME键"，指示灯3闪烁
2、按"－"+"＋"两个按键按住不放可切换手柄模式
3、连接成功后手柄指示灯3常亮为X-INPUT模式，手柄指示灯2常亮为D-INPUT模式。

【安卓ShootingPlus V3模式】

鸿蒙系统与安卓ShootingPlus V3模式相同

1、同时按住"A+HOME键"2秒进入V3安卓模式，手柄指示灯4闪烁，当安卓手机搜索到"S0789"设备名时，选择连接，连接成功后，手柄指示灯4常亮。
2、已成功连接过，可直接按HOME键，灯效慢闪，自动回连。

安卓/鸿蒙 按键映射功能:

关注公众号"ShootingPlus"，查看公众号内的默认操作说明，如需设置映射键位，请下载安装"ShootingPlusV3"APP，在APP内进行按键映射以及调整按键位。

ShootingPlusV3 App，安卓与鸿蒙系统可以到各手机应用市场下载。

ShootingPlus微信公众号

【蓝牙模式】

1、同时按"R键+HOME键"2秒进入电脑蓝牙模式，指示灯2闪烁，打开电脑找到添加蓝牙设备，点击搜索，找到xbox wireless controller，点击连接，连接成功，手柄指示灯2常亮
2、已成功连接过，可直接按HOME 自动回连。

（苹果MFi游戏，安卓HID，PC电脑X-input 使用此模式）

充电说明：

手柄电量不足 指示灯闪烁
手柄充电时 指示灯慢闪
手柄充满电时 指示灯关闭

手柄关机说明：

1、按充电口对码键一秒为快速关机
2、按HOME键五秒关机

背部扩展设置：

【背部宏扩展设置】
①同时按住手柄的"⊖"+M1"键2秒，等到LED快闪松开，进入编程状态
【M1/M2设置方法一样】
②设置模式开启后HOME灯光会快闪，这个时候就能设置按键，手柄按什么键就会录入到M1按键上。如:按一下A键，这样A就会录入到M1上【此按键为另举:其他键位也均可录入】
③如需设置多个按键:按一下A再按B再按X再按Y，这样按M1出招顺序就是ABXY【此按键设置为列举:其他出招顺序均可设置12个ABXY/上下左右/L/ZL/R/ZR】
④按键按完后，再按下M1即为完成编程，此时灯光常亮

【背部宏清除按键】
①同时按住手柄的"⊖"+M1"键2秒，等到LED快闪松开，进入宏清除状态
【M1/M2设置方法一样】
②清除模式开启后HOME灯光会快闪，这个时候再次按下M1就能清楚M1编程键的键值。注意：此时不要按下任何普通按键
③按键按完后，即为完成清除编程，此时灯光常亮。

马达震动力度调节：

右摇杆 按住TURBO+右摇杆上下可以增强减弱马达震动力度

TURBO设置：

按下"A"再按"T"，则为"A"键Turbo连发
第二次按下"A"再按"T"，则为"A"键自动连发
第三次按下"A"再按"T"，则为"A"键关闭连发(恢复原状)

当"A"键在AUTO自动连发的情况下，按住"TURBO+左摇杆上下"设置自动连发的速度，分别为一秒15下，一秒25下，一秒8下。（注：其他功能键设置方法同上）

轴校准功能：

手柄平放至桌面，按住 ⊛ + HOME 键，指示灯常亮后松手，校准完成后指示灯灭。

灯光调节功能：

S07手柄，无灯光功能。
S08手柄，"TURBO+L3"同时按下为关闭背景灯。
S09手柄，"TURBO+L3"同时按下为关闭背景灯，"TURBO+R3"同时按一下为停止RGB灯光炫光模式一关闭RGB灯光一开启RGB灯光!

BSP

Wireless Controller Manual

General instructions:

1、This product adopts ergonomic design and has a comfortable touch.
2、The controller supports Switch consoles, PC computers, televisions, Android phones, Shooting Plus V3 mode, HID standard mode, and various games, as well as Apple phones, MFi games, and PS3/PS4 consoles.
3、Support for back expansion macro settings [up to twelve keys can be set]
4、Supports motor vibration intensity adjustment in four modes
5、The net weight of the bare machine of the product is approximately 203.6g
6、Supports Turbo combo and Auto auto combo functions.

【Due to uncontrollable factors such as upgraded source code changes on the official gaming platform software】

Product performance parameters:

1. Operating voltage: DC3.7V
2. Operating current: about 120 mA
3. Duration of use: 12 hours
4. Dormancy Current: <2ua
5. Charging voltage/current: DC5V/500mA
6. Standby time: 60 days at full power

Schematic diagram of function buttons:

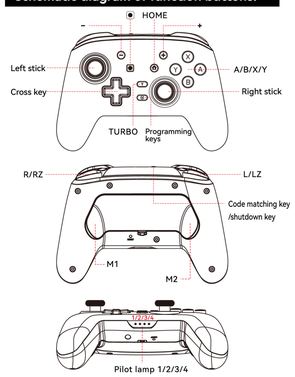

Product connection instructions:

【Switch Connection】

1、On the Switch host, select Control>Change Grip/Order to enter the Switch host pairing mode interface Press L+R on the controller;
2、Press and hold the "code matching button" at the top of the handle for 5 seconds to connect, and after successful connection, the No. 1 indicator light will remain on;
3、When connecting the switch again, press the "HOME key" to turn it on and it will automatically connect.

【PS3/PS4/PS5 Connection】

1、Plug the USB data cable into the USB interface of the PS4, and plug the Type-C interface on the other end into the handle. After the light flashes, press the "HOME key" to connect.
2、After successful connection, the channel light remains on to indicate successful connection. After being constantly on, unplug the data cable to operate wirelessly.
When connecting to PS4 again, press the "HOME key" to turn it on and it will automatically connect.

【Wired mode connection】

1、Plug the USB data cable into the USB interface of the computer host, and plug the Type-C interface on the other end into the handle. After successful connection, the indicator light remains on to indicate successful connection.
2、Successfully connected: Press and hold the middle of the handle The 'HOME key' can switch the handle mode
X-Input (No. 2 light always on) (PC360 mode)
D-Input (No. 3 light always on) (PC digital mode)

Steam end: In the upper left corner of the Steam interface, select Settings - General Controller - Find General Handle, etc

The switch host is wired and the number one light is always on

【2.4G mode connection】

1、Plug the receiver into the USB of the computer host, press the "L+HOME" button on the handle, and the indicator light 3 flashes
2、Press and hold the " ⊖ + ⊕ " two buttons to switch the handle mode
3、After successful connection, the handle indicator light 3 remains in X-Input mode, while the handle indicator light 2 remains in D-Input mode.

【Android ShootingPlus V3 mode】

The Harmony OS system and Android ShootingPlus V3 mode are the same

1、Simultaneously press and hold the "A+HOME" button for 2 seconds to enter V3 Android mode, and the handle indicator light 4 flashes. When the Android phone searches for the device name "S0789", select Connect. After successful connection, the handle indicator light 4 remains on.
2、Successfully connected, you can directly press the HOME button, the light will flash slowly and automatically connect back.

Android/Harmony OS key mapping function:

Follow the official account "ShootingPlus" and check the default operating instructions in the official account. If you need to set the mapping keys, please download and install the "ShootingPlusV3" APP, map the keys and adjust the key positions in the APP.
ShootingPlusV3 App, Android and Hongmeng systems can be downloaded from various mobile application markets.

ShootingPlus WeChat official account

【Bluetooth mode】

1、Simultaneously press the "R+HOME" button for 2 seconds to enter the Bluetooth mode of the computer. The indicator light 2 flashes. Turn on the computer, find the Bluetooth device to add, click search, find the Xbox wireless cotroller, click connect, connect successfully, and the handle indicator light 2 remains on
2、Successfully connected, you can directly press HOME to automatically connect back.

(Apple MFi games, Android HID, PC X-input using this mode)

Charging instructions:

The low battery indicator light on the handle flashes

The indicator light flashes slowly when the handle is charging

The indicator light turns off when the handle is fully charged

Handle shutdown instructions:

1、Press the charging port code matching button for one second to quickly shut down the device
2、Press the HOME key for five seconds to shut down

Back Extension Settings:

【Back Macro Extension Settings】
①Press and hold the "⊖+M1" button on the handle for 2 seconds, wait until the LED flash is released, and enter the programming state
The setting method for M1/M2 is the same
②After the setting mode is turned on, the HOME light will flash quickly. At this time, you can set the button, and the key that the handle presses will be recorded on the M1 button. For example, press the A key once, and A will be entered on M1. This button is for example: other key positions can also be entered
③To set multiple buttons: press A once, then B, then X, and then Y, so that the order of using M1 to attack is A B X Y. [This button is set to list: other attack sequences can be set to 12 ABXY/up, down, left, right/L/ZL/R/ZR]
④After pressing the button, press M1 again to complete the programming, and the light remains on
【Back macro clear button】
①Press and hold the "⊖+M1" button on the handle for 2 seconds, wait until the LED flash is released, and enter the macro clear state
The setting method for M1/M2 is the same
②After the clear mode is turned on, the HOME light will flash quickly. At this time, pressing M1 again will clear the key value of the M1 programming key. Note: Do not press any ordinary buttons at this time
③After pressing the button, the clear programming is completed, and the light remains on.

Motor vibration force adjustment:

Right Rocker Pressing and holding the TURBO+right joystick up and down can enhance and weaken the motor vibration force

TURBO settings:

Press "A" and then "T" for "A" key Turbo continuation
The second press of "A" and then "T" will automatically connect the "A" key
Press "A" for the third time and then "T" for "A" key to close the issue (restore original)

When the "A" key is automatically connected in AUTO, press and hold "TURBO + left rocker up and down" to set the speed of automatic connection, 15 times a second, 25 times a second, 8 times a second, respectively. (Note: Other function key settings are the same as above)

Axis calibration function:

Place the handle flat on the desktop, press and hold the ⊛ +HOME key, release the indicator light after it remains on, and turn off the indicator light after calibration is completed.

Light adjustment function:

S07 handle, no lighting function.
S08 handle，Press "TURBO+L3 simultaneously to turn off the backlight.
S09 handle，Press "TURBO+L3" simultaneously to turn off the background light, and press "TURBO+R3" simultaneously to stop the RGB light glare mode. Turn off the RGB light and turn on the RGB light!

BSP

無線コントローラ説明書

一般的な説明：

1、本製品は人体工学設計を採用し、手触りが快適である。手
2、柄はSwitch本体、PCパソコン、テレビ、アンドロイド携帯電話、Shooting Plus V３モード、HID標準モードと各種ゲームアップル携帯電話MFiゲーム及びPS 3/PS 4本体をサポートしている。
3、バックグラウンド拡張マクロ設定をサポート【最大12個のキーを設定可能】
4、モータの強弱調整をサポートし、全部で4種類のモード
5、製品ベアネット重量約203.6 g
6、Turbo連発、Auto自動連発機能をサポートする。

【公式ゲームプラットフォームのソフトウェアアップグレード式ソースコード変更などの不可抗力要因により】

製品パフォーマンスパラメータ：

1.動作電圧：DC 3.7 V
2.動作電流：約120 mA
3.継続使用時間：≒12時間
4.スリープ電流：<2 ua
5.充電電圧/電流：DC 5 V/500 mA
6.待機時間：満充電60日間放置

機能ボタンの概略図：

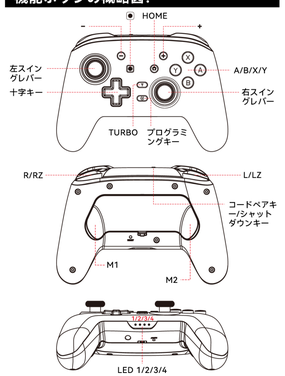

製品接続の説明：

【SWITCHホスト接続】

1、SWITCHホストでは、ハンドルControllers>グリップ/シーケンスChange Grip/orderを選択し、SWITCHホストペアリングモードインタフェースPress L+R on the controllerに進みます。
2、ハンドル上部の「コードキー」を5秒間長く押して接続し、接続に成功すると1番のLEDが常に点灯します。
3、スイッチを再び接続するときは、「ホームキー」を押して電源を入れると、自動的に接続されます。

【PS3/PS4/PS5ホスト接続】

1、USBデータケーブルをPS 4のUSBインタフェースに差し込み、他端のType-Cインタフェースをハンドルに差し込み、ライトが点滅したら、「HOMEキー」を押すと接続できます。
2、接続が成功すると、チャネルランプは常に接続成功として点灯します。点灯したらデータ線を抜くと無線で操作できます。
PS 4に再び接続する場合は、「ホームキー」を押して電源を入れれば、自動的に接続できます。

【有線モード接続】

1、USBケーブルをパソコン本体のUSBポートに、もう一方のType-Cポートをハンドルに差し込みます。接続が成功すると、LEDは常に接続成功として点灯します。
2、接続成功：ハンドルの中央を押したままホームキーでハンドルモードを切り替えるには
X-INPUT（2灯常時点灯） （PC 360モード）
D-INPUT（3番ランプは常時点灯） （PCデジタルモード）

Steam端：Steamインタフェース左上、設定-通常コントローラ-汎用ハンドルなどをチェックすればよい
Switch本体の有線接続は1番ランプが常時点灯

【2.4 Gモード接続】

1、受信機はコンピュータ本体のUSBに差し込み、ハンドルは「L+HOMEキー」を押し、ランプ3は点滅する
2、（⊖+⊕）の2つのキーを押したまま放さない切り替え可能ハンドルモード
3、接続が成功すると、ハンドルランプ3は常にX-INPUTモードに点灯し、ハンドルランプ2は常にD-INPUTモードに点灯する。

【Android ShootingPlus V３モード】

鸿蒙システムはアンドロイドShootingPlus V３モードと同じ

1、同時に「A+HOMEキー」を2秒間押し続けてV３アンドロイドモードに入り、ハンドルランプ4が点滅し、アンドロイド携帯電話が「S 0789」デバイス名を検索した場合、接続を選択し、接続に成功した後、ハンドルランプ4は常に点灯する。
2、正常に接続されており、ホームボタンを直接押すことができ、ランプの効果が選く点滅し、自動的に接続を戻すことができます。

Android/鸿蒙 キーマッピング機能:

公衆番号「ShootingPlus」に注目し、公衆番号内のデフォルト操作説明を見て、マッピングキーを設定する必要がある場合は、「ShootingPlusV３」アプリをダウンロードしてインストールし、アプリ内でキーマッピングとキー調整を行ってください。

ShootingPlusV３App、アンドロイドと鴻蒙システムは各携帯電話アプリ市場にダウンロードできる。

ShootingPlus 公衆番号

【Bluetoothモード】

1、同時に「Rボタン+HOMEボタン」を2秒間押してコンピュータBluetoothモードに入り、ランプ2が点滅し、コンピュータを開いてBluetoothデバイスを追加し、検索をクリックし、xbox wireless cotrollerを見つけ、接続をクリックし、接続に成功し、ハンドルランプ2が常に点灯する
2、正常に接続されました。ホームを直接押して自動的に接続を戻すことができます。

（アップルMFLゲーム、アンドロイドHID、PCパソコン X-inputはこのモードを使用）

充電手順：

ハンドルの電力不足、LED点滅

ハンドルの充電中にLEDがゆっくり点滅

ハンドルに電力が供給されると、LEDがオフになります

ハンドルのシャットダウンの説明：

1、充電口のコードキーを1秒間押して急速に電源を切る
2、ホームキーを押して5秒で電源を切る

背面拡張設定：

【バックマクロ拡張設定】
①同時にハンドルの「⊖」+M1」キーを2秒間押し続け、LEDのフラッシュが放たれてプログラミング状態になるまで待ちますM 1/M 2設定方法は同じ】
②設定モードがオンになるとHOMEライトが点滅し、このときにボタンを設定することができ、ハンドルからのボタンを押すとM 1ボタンに入力されます。例:Aキーを押すと、AはM 1に入力されます【このキーは列挙: 他のキーも入力できます】
③複数のボタンを設定する必要がある場合: Aを押して Bを押してXを押してYを押すと、M 1を押すとA B X Yが出ます【このボタンの設定は以下の通りです: その他の出技順はすべて12個のABXY/上下左右/L/ZL/R/ZRを設定することができます】
④キーを押した後、M 1を押すとプログラミングが完了し、ライトが点灯します

【バックマクロクリアボタン】
①同時にハンドルの「⊖」+M1」キーを2秒間押し続け、LEDのフラッシュが緩んでマクロクリア状態になるまで待ちます【M 1/M 2設定方法は同じ】
②パージモードがオンになるとHOMEライトがフラッシュし、このとき再びM 1を押すとM 1プログラミングキーの キー値がわかります。注：通常のキーは押さないでください
③キーを押し終わると、パージプログラムを完了するためにライトが点灯します。

モータ振動力調節：

右スイングレバー TURBO+右ロッカーバーの上下を押すと、モーターの振動力を弱めます

TURBO設定：

「A」を押して「T」を押すと、「A」キーTurbo連発
2回目に「A」を押して「T」を押すと、「A」キーが自動的に連続します
3回目に「A」を押して「T」を押すと、「A」キーで連続を閉じる（元に戻す）

「A」キーがAUTOで自動的に連続する場合、「TURBO+左ロッカー上下」を押しながら自動連続の速度を設定します。それぞれ1秒15、1秒25、1秒8です。
（注：その他のファンクションキーの設定方法は同上）

軸較正機能：

ハンドルをデスクトップに平らに置き、⊛ +HOMEキーを押したまま、ランプが常に点灯したら手を放し、キャリブレーションが完了するとランプが消えます。

ライト調整機能：

S 07ハンドル、ライト機能なし。
S 08ハンドル、「TURBO+L 3」を同時に押すとバックライトがオフになります。
S 09ハンドル、「TURBO+L 3」を同時に押すとバックライトがオフになり、「TURBO+R 3」を同時に押すとRGBライトが停止するフラッシュモードがオフになるとRGBライトがオンになる!